



## 83 Series 2

### Quick Shackle Change Instructions for 83AL's, 83/45's, 83KnK/45 SGT, 83/50's & 83WP/53

**Change a shackle in seconds with ABUS Patented  
"QUICK SHACKLE CHANGE"  
Simply use the NEW ABUS shackle change tool**



83 S2 Premium Shackle Change Tool  
Part # 83414A

 


83/34 S2 w/o Shackle  
Part # 83351

 


83/45 S2 with Shackle  
Part # 83638

1. Hold the lock so that bottom of the lock is facing right with the drain hole in the twelve o'clock position.

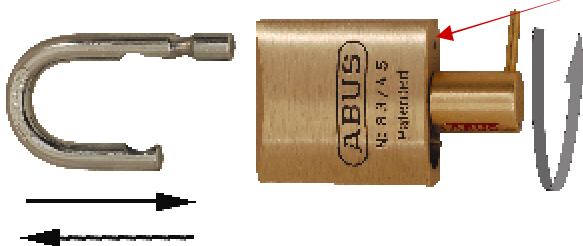

2. Insert tool so that tip of tool fits vertically right between the two triangles of the bolt driver and the handle of the tool is facing you and rotate clockwise. **(NOTE: Do not remove the pressed in plate)**
3. Shackle will release to pull out. Tool will be under spring tension.
4. While keeping the tool under tension, ensure the shackle spring and locking balls are in position and then insert your new shackle.
5. Release tool while the shackle is in the open position.
6. Remove tool.
7. Insert Cylinder and screw in cylinder retaining screw.

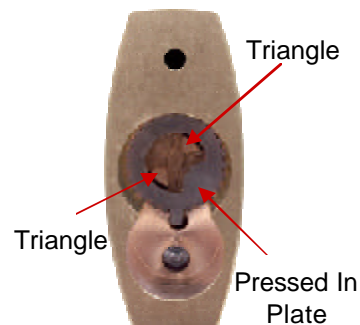

FREE 83 S2 Quick Shackle  
Change Tool  
Part # 83414B

Note: When installing the Z-bar, make sure the black dot is up.

#### ABUS Lock Company

23910 North 19<sup>th</sup> Ave, #56  
Phoenix, AZ 85027  
Phone: (623) 516-9933  
Toll free: (800) 352-2287  
Fax: (623) 516-9934  
[www.abuslock.com](http://www.abuslock.com)